

Hand Wash Timer | HWT



HWT-20

Mfg. No. 9900640
Dimensions: 6" x 1 1/4" x 4"
(152 mm x 32 mm x 102 mm)

Prevent the spread of germs and infectious disease when handling food product by promoting safe cleaning practices with the Hand Wash Timer.

The Hand Wash Timer displays a repeating 20-second countdown to provide a visual reminder of the recommended time for properly washing hands. It requires no user intervention to operate or activate, and it helps employees conform to health and safety requirements while also demonstrating a commitment to safe cleaning practices.

FEATURES

- Runs on two AA batteries with an estimated operating life of three years.
- Mounts to any magnetic surface.
- Encourages safe cleaning habits to prevent the spread of infectious diseases.
- No user intervention required to operate or activate the timer.
- Helps employees conform to the HACCP Safety requirement.
- Assures customers that your employees have a procedure for healthy standards.
- Demonstrates to local health inspectors your commitment to safe cleaning practices in the restaurant.

THE CORRECT WAY TO WASH HANDS

1. Wet hands and apply liquid soap.
2. Rub hands vigorously together and scrub all surfaces.
3. Continue until the Hand Wash Timer completes a full cycle. The soap combined with vigorous scrubbing helps dislodge and remove germs.
4. Rinse thoroughly and dry hands with a clean towel.

Hand Wash Timer | HWT

Instructions for Use

Follow these instructions for mounting the timer, changing the batteries, and using the timer to properly wash hands.

MOUNTING THE HAND WASH TIMER

The Hand Wash Timer will mount directly to any flat steel surface with the magnetic backing.

NOTE: Thoroughly clean the surface where the Timer is to be mounted before proceeding. Observe the proper cleaning procedures as required. Mount the Hand Wash Timer in the location that best suits your operation.

1. If desired, use the Universal Mounting Bracket by carefully peeling the backing from the adhesive and secure the Universal Bracket to the chosen mounting surface.

NOTE: The adhesive is strong. Make certain to center it properly before attaching.

2. Attach the Hand Wash Timer to the Universal Bracket or directly to a magnetic surface.

CHANGING BATTERIES

The Hand Wash Timer comes with two AA batteries installed. These batteries have an estimated operating life of 3 years. In the event the batteries need to be changed, follow these steps:

1. Remove the four screws from the rear of the unit and remove the back panel.

2. Remove and properly discard the two old AA batteries.
3. Install two new AA batteries. The unit should begin to operate automatically.
4. Re-attach the back panel and secure with the four screws.

PROPER HAND WASHING TECHNIQUE

1. Wet hands and apply liquid soap.
2. Rub hands vigorously together and scrub all surfaces.
3. Continue until the Hand Wash Timer completes a full cycle. The soap combined with vigorous scrubbing helps dislodge and remove germs.
4. Rinse thoroughly and dry hands with a clean towel.

PROBLEMS WITH THE TIMER?

If you experience any problem with your Hand Wash Timer, contact the manufacturer immediately at 877-392-7854 (Toll Free in the U.S. and Canada) or at 630-784-1000 (outside the U.S and Canada).

CLEANING THE TIMER

To clean the timer, wipe it lightly using a clean, dry towel. Do NOT submerge the timer in water. Do NOT wash it in a dishwasher. This will void the warranty.

P/N 1020263 01/17



Antunes delivers a complete range of countertop cooking equipment and water filtration solutions to foodservice operations around the world. Learn more about Antunes and its products at www.antunes.com.

Corporate Headquarters

Carol Stream, Illinois
Phone: (630) 784-1000
Toll Free: (800) 253-2991
Fax: (630) 784-1650

China Facility

Suzhou, China
Phone: 86-512-6841-3637
Fax: 86-512-6841-3907